 


ENGLISH

USE

The Minibars of the K PLUS series are equipped with a pre-set thermostat located on the back of the refrigerator (the temperature has already been adjusted to the correct operating levels). You can select the duration of the cooling cycles using the remote control. When the minibar is connected to power supply, it automatically turns on using the mechanical thermostat functions.

Operating cycles of K PLUS compressor unit controlled by the electronic timer

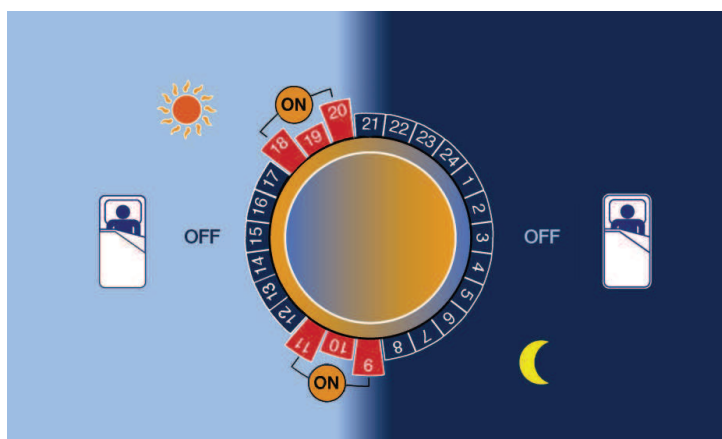

ON

The compressor is in operation to cool the contents of minibar and to freeze the eutectic plate (6 hours over 24 hour are sufficient).

OFF

The compressor is Off and the cooling energy stored in the holding plate maintains the inside minibar temperature. The minibar is completely noiseless during the night.



Preset programs for K plus version, in which a panel can be installed on the door

PROGRAM	WORKING TIME		AMBIENTE TEMPERATURE
	1ST CYCLE	2ND CYCLE	
P1	09-12	18-21	25°C
P2	09-13	18-22	28°C
P3	09-14	17-22	30°C
P4	ADJUSTABLE		
OFF	SWITCH ON/OFF		


Preset programs for K plus version with glass door

PROGRAM	WORKING TIME		AMBIENTE TEMPERATURE
	1ST CYCLE	2ND CYCLE	
P1	09-13	18-22	≤ 25°C
P2	09-14	18-23	≤ 28°C
P3	08-14	17-23	≤ 30°C
P4	ADJUSTABLE		
OFF	SWITCH ON/OFF		

HOW TO USE THE MINIBAR WITH THE REMOTE CONTROL:

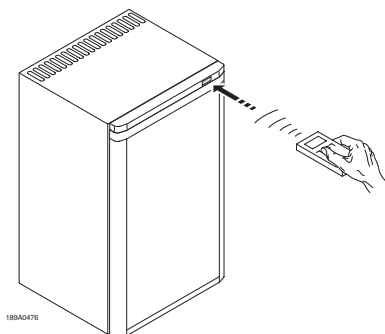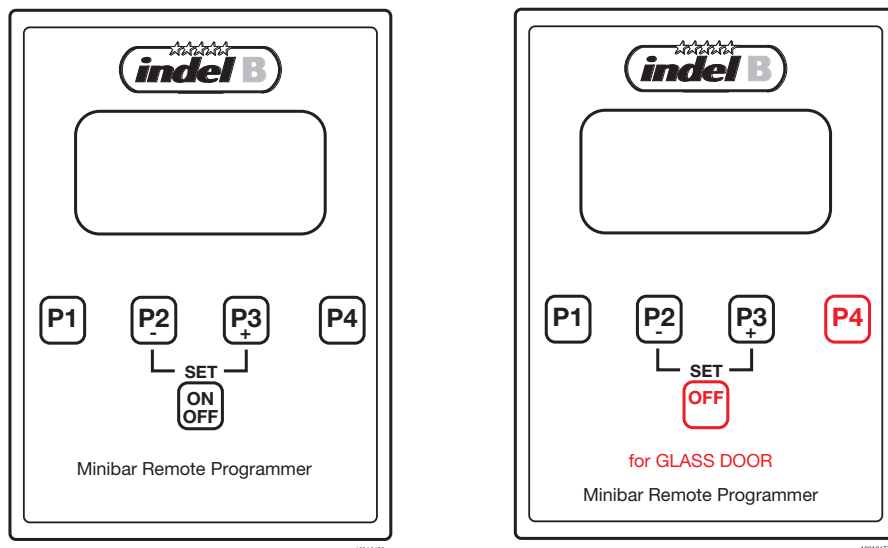


The compressor minibar equipped with a remote control allows you to set the operation of the compressor to make it work at certain times of day. Each refrigerator has three periods of use which have already been preset, and one (P4) which can be programmed by the user. One can set a maximum of two ON/OFF cycles within 24 hours. The remote control is easy to use. After choosing the programme on the remote control, just point the remote control at the receiver on the outside of the minibar (at a distance of about 30-40 cm). Keep the button for the chosen programme on the remote control pressed for at least two seconds: the minibar will start to work. The display will display the following symbol.

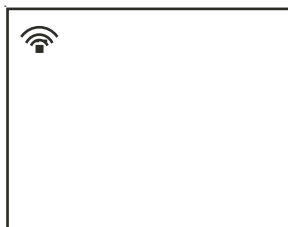


ENGLISH

After installing the battery, the display will show the following picture for 5 seconds.

Preset programs for K plus version, in which a panel can be installed on the door

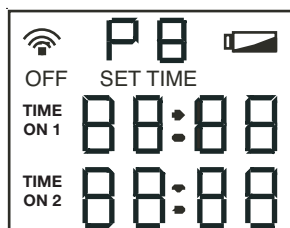


Preset programs for K plus version with glass door

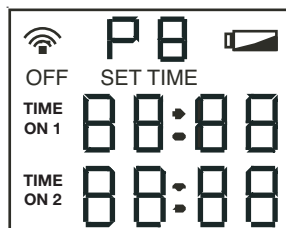


The display then shows the current hour. if no button is pressed during the following 8 seconds, the words will disappear on the display until another button is pressed.

If you press the buttons P1, P2 or P3, the display will show the pre-set programmes as in the following images. Attention: the programmes P1-P2 and P3 are pre-set and cannot be changed.

 Preset programs for K plus version, in which a panel can be installed on the door

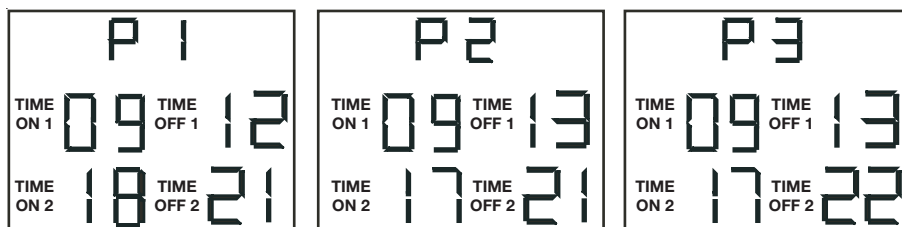


 Preset programs for K plus version with glass door

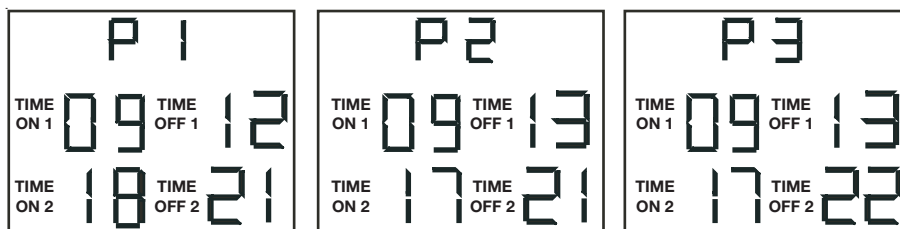


If you press the button P4, the display will show the following:

 Preset programs for K plus version, in which a panel can be installed on the door

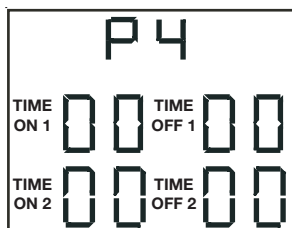

 Preset programs for K plus version with glass door

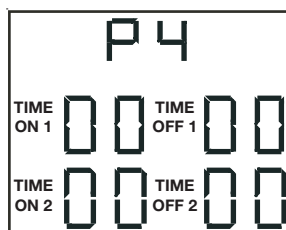

The programme P4 allows the user to set two refrigerator working cycles (the first cycle Time on1 –Time off1 and the second cycle Time on2 and Time off2).

To customise the programme P4:

press P1 and P4 simultaneously.

“Time On1” will start to flash on the left.

Use the buttons - (P2) and + (P3) to set the starting time of the first cycle.

Press the button P1 to move ahead to the following fields and then use the - and + buttons again to change the starting and stopping time of the operation cycles of the compressor.

After completing the customisation of the programme, press P4 to save the new settings.

ENGLISH

SETTING THE TIME

If you press any button from P1 to P4 several times, the display will show the chosen programme and then the time.

To set the time, press P2 and P3 at the same time. The hour digits will start to flash and the display will show the words "set time".

Press - (P2) and + (P3) to set the right time.

To set the minutes, press P1 and then - (P2) and + (P3).




Press P4 to save the new time setting. The display will show the current time.



To set a programme (P1, P2, P3 or P4) on the minibar, press the button of the chosen programme for at least 2 seconds.

If the batteries have run out, the display will show this symbol:

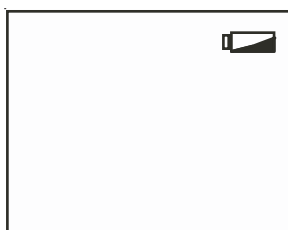

Press ON/OFF to turn the minibar off. The display will show "Off". To enable the remote control again, press the ON/OFF key.



**Attention!**

If the mains power supply is cut off for less than 48 hours, the minibar turns on again using the previously set program. If the mains power supply is cut off for more than 48 hours, the minibar will be operated by the pre-calibrated thermostat. To set a program again, follow the instructions given on page 12.

**Attention!**

If the power supply is voluntarily cut off, wait at least 15 minutes before turning the refrigerator on again (i.e. before connecting it to mains supply). If not, the compressor could be locked for few minutes before starting its normal operation.

MAINTENANCE

- Use a moisture cloth to clean.
- If you are not using the minibar, we suggest cleaning it well inside and leaving the door ajar to ventilate the interior.


In case of failure to work or faulty operation make sure that:

- a) the plug is fitted properly into the mains socket;
- b) the power mains voltage is the same as the one specified on the TECHNICAL SPECIFICATIONS label;
- c) the refrigerator is not located near heat sources or under the sun.

DISPOSAL TO MANAGE THE WASTE

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

